

**GIVE YOUR CUSTOMERS A STRONGER,
MORE RESILIENT ROOF.**



RE-ROOFING CHECKLIST

HURRICANE



This checklist will familiarize you with the specific requirements of FORTIFIED Roof™, a superior yet affordable design and construction standard for re-roofing.

version 2022.1

FORTIFIED HOME RE-ROOFING CHECKLIST

1. Pre-Qualifications

- 1.1 Engage a [certified FORTIFIED evaluator](#). If you are seeking a FORTIFIED designation certificate, which is generally required for insurance discounts and/or tax incentives, you must work with an evaluator. This independent third-party inspector will verify the requirements of this checklist have been met and will submit the required documentation to IBHS.

Refer to the [Evaluator Checklist](#) for a complete list of the Documentation Requirements

- 1.2 When re-roofing over existing roof deck, 7/16 in. minimum deck thickness and a maximum rafter spacing of 24 in. o.c. is required. Existing roof decks with less than minimum thickness can be re-decked^(3.1). Retrofit solutions provided by a professional engineer may be considered. (Note: when installing all new roof deck where local codes reference ASCE 7-10, 7/16 in. minimum thickness is required; where local codes reference ASCE 7-16, 15/32 in. minimum thickness is required).

2. Roofing Scope


- 2.1 Is the home within 3,000 ft of saltwater shoreline water? **If yes**, hot-dip galvanized and/or stainless steel fasteners are required. See [Technical Bulletin FH 2021-02](#) and [FORTIFIED Standard Detail F-G-1](#) for more information.
- 2.2 Remove all existing roofing material. Replace any damaged wood.
- 2.3 Nail the roof deck with 8d ring-shank nails^(3.2) at 4 in. o.c. per [F-RR-3](#).
- 2.4 Seal the roof deck (choose one of the following three options).
 - 2.4.1 Option 1: [F-SRD-2 - Install a 4-in.-wide \(nominal\) roof deck flashing tape](#)^(3.4) over all roof sheathing panel seams and cover the deck with a #30 felt or an equivalent synthetic underlayment^(3.5). Note: [Attach underlayment](#) with button cap nails at 6 in. o.c. along the laps and 12 in. o.c. spacing, vertically and horizontally, between the laps.
 - OR -
 - 2.4.2 Option 2: [F-SRD-3 - Install a two-layer #30 felt underlayment system](#)^(3.7). Installation instructions for a two-layer #30 felt underlayment system: Cut 17 in. off one side of the roll and install the remaining 19-in.-wide strip of underlayment. Tack in place. Install a 36-in.-wide roll of underlayment over the 19-in.-wide course of underlayment along the eave. Continue, overlapping the sheets 19 in. (leaving a 17-in. exposure). Attach underlayment with button cap nails at 6 in. o.c. along the laps and 12 in. o.c. spacing, vertically and horizontally, between the laps.
 - OR-
 - 2.4.3 Option 3: [F-SRD-4 - Install a self-adhered \(peel-and-stick\) membrane](#)^(3.3) over the entire roof deck. Recommend #15 felt as bond break between membrane and shingles. **Note:** Manufacturers emphasize the need for adequate attic ventilation when this type of membrane is applied over the entire roof.
- 2.5 [Install proper flashing](#) at all penetrations and roof/wall intersections, at valleys, at gables and at eaves.
 - Refer to [FORTIFIED General Flashing Guidelines for Steep-Sloped Roofs](#) for more information.
- 2.6 Install [drip edge](#)^(3.8) over the underlayment at rakes and eaves and fasten at 4 in. o.c. staggered per [F-DE-1](#).



<https://vimeo.com/271121653>



<https://vimeo.com/271121736>

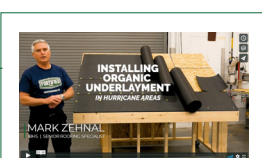


<https://vimeo.com/271121486>



<https://vimeo.com/271122117>


- 2.7 Asphalt shingles
 - 2.7.1 [Starter strips adhered at the eave and rake](#). Either embed the starter strip in roofing cement or use self-adhered starter strips per [F-RC-1](#), [F-RC-2](#), [F-RC-3](#).
 - 2.7.2 Asphalt shingles^(3.9) must be ASTM D3161 (Class F) or ASTM D7158 (Class H) rated and be installed with six nails per high-wind installation instructions.

NOTE: All other roof coverings (metal, tile, low-sloped roofs, wood shakes/shingles) must be rated and installed for the site-specific wind speed and design pressures corresponding to $V_{ult}=130$ mph with Exposure C minimum.

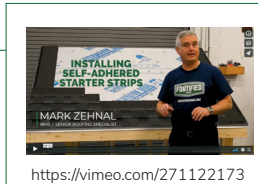

- 2.8 All ridge and off-ridge roof vents must be tested in accordance with TAS 100 (A) and/or have Miami-Dade County approval.
- 2.9 Any gable end wall vents need to have temporary storm protection available. Note that the vent protection is temporary and must be available for installation in the event of a storm.

IMPORTANT! After installation, Roofing Compliance Forms (RCF) MUST be completed electronically. The FORTIFIED Evaluator will provide a link to the appropriate RCFs, which the roofing contractor must complete and sign.

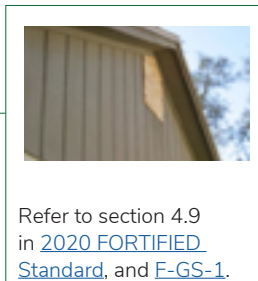

3. Qualifying Products and Systems

- 3.1 For existing roof sheathing less than minimum required over 24 in rafter spacing - remove existing sheathing and install new roof sheathing meeting minimum thickness requirements directly to rafters/trusses per Section 2.3 or, if the existing sheathing is in good condition, install new roof sheathing meeting minimum thickness requirements over the existing sheathing by attaching to the rafters/trusses below using 10d ring-shank nails (0.120 in.x 3.0 in.) at 4 in. o.c.
- 3.2 8d ring-shank nails must be at least 0.113-in. diameter and 2-3/8-in. long.
- 3.3 Self-adhered membrane must meet ASTM D1970 requirements.
- 3.4 [Roof deck flashing](#) tape must be a 4-in.-wide (nominal) ASTM D1970 or 3-3/4-in. wide AAMA 711- 13, Level 3 compliant self-adhering flashing tape.
- 3.5 #30 felt or synthetic underlayment equivalent must be an ASTM D226 Type II or ASTM D4869 Type III or IV underlayment or a synthetic underlayment equivalent that has an ICC approval as ASTM D226 Type II and meets ASTM D4869 section 8.6 water shower test.
 - ASTM D6757 is an acceptable alternate underlayment in lieu of ASTM D226 Type II and ASTM D4869 Types III and IV for the following situations:
 - 2.4.1 Option 1 for asphalt shingles only
 - 2.4.2 Option 2 for asphalt shingles only
- 3.6 Button cap nails must be annular-ring or deformed-shank roofing fasteners with minimum 1-in.-diameter caps.
- 3.7 #30 felt must be an ASTM D226 Type II or ASTM D4869 Type III or IV organic felt underlayment (ASTM D6757 is an acceptable alternate as described in section 3.5). Synthetic underlayments are not allowed for the two-layer system. Installation instructions for a two-layer #30 felt underlayment system: Cut 17 in. off one side of the roll and install the remaining 19-in.-wide strip of underlayment. Tack in place. Install a 36-in.-wide roll of underlayment over the 19-in.-wide course of underlayment along the eave. Continue, overlapping the sheets 19-in. (leaving a 17-in. exposure).
- 3.8 Drip edge must extend ½ in. below sheathing and extend back on the roof a minimum of 2 in., overlap 3 in. at joints, meet code requirement for metal gauge, and be fastened at 4 in. o.c., staggered.
- 3.9 Asphalt shingles must have an ASTM D7158 Class H and/or ASTM D3161 Class F wind rating.

ADDITIONAL
INFORMATION
[2020 Standard](#)
[Standard Details](#)



FORTIFIEDHOME.ORG